



LIVEY D600 DECT Wireless Headset Series

Quick setup guide



This quick setup guide provides you with the essential steps to get your headset up and running. Prior to unboxing, examine the shipping package for evidence of physical damage. If there is proof of mishandling, report it to the relevant support center of the regional representative or operator. Furthermore, ensure all relevant components are available in the package before proceeding to the next step. For more information, refer to the 'LT-D600' wireless headset series user guide'.




How to get started

This section provides you with the essential steps to get your headset up and running, and how to connect it in three of the main user scenarios.

To configure, manage, operate, and maintain, you must install the LIVEY DECT Setup Tool on your PC/laptop. Follow the steps below and for more information, refer to the 'LIVEY DECT Setup Tool user guide'.

Install the LIVEY DECT Setup Tool

- Download the zip file from LIVEY DECT Cloud Services or use the link provided by your LIVEY DECT contact.
- Install the tool by following the on-screen steps, then open the LIVEY DECT PC tool.

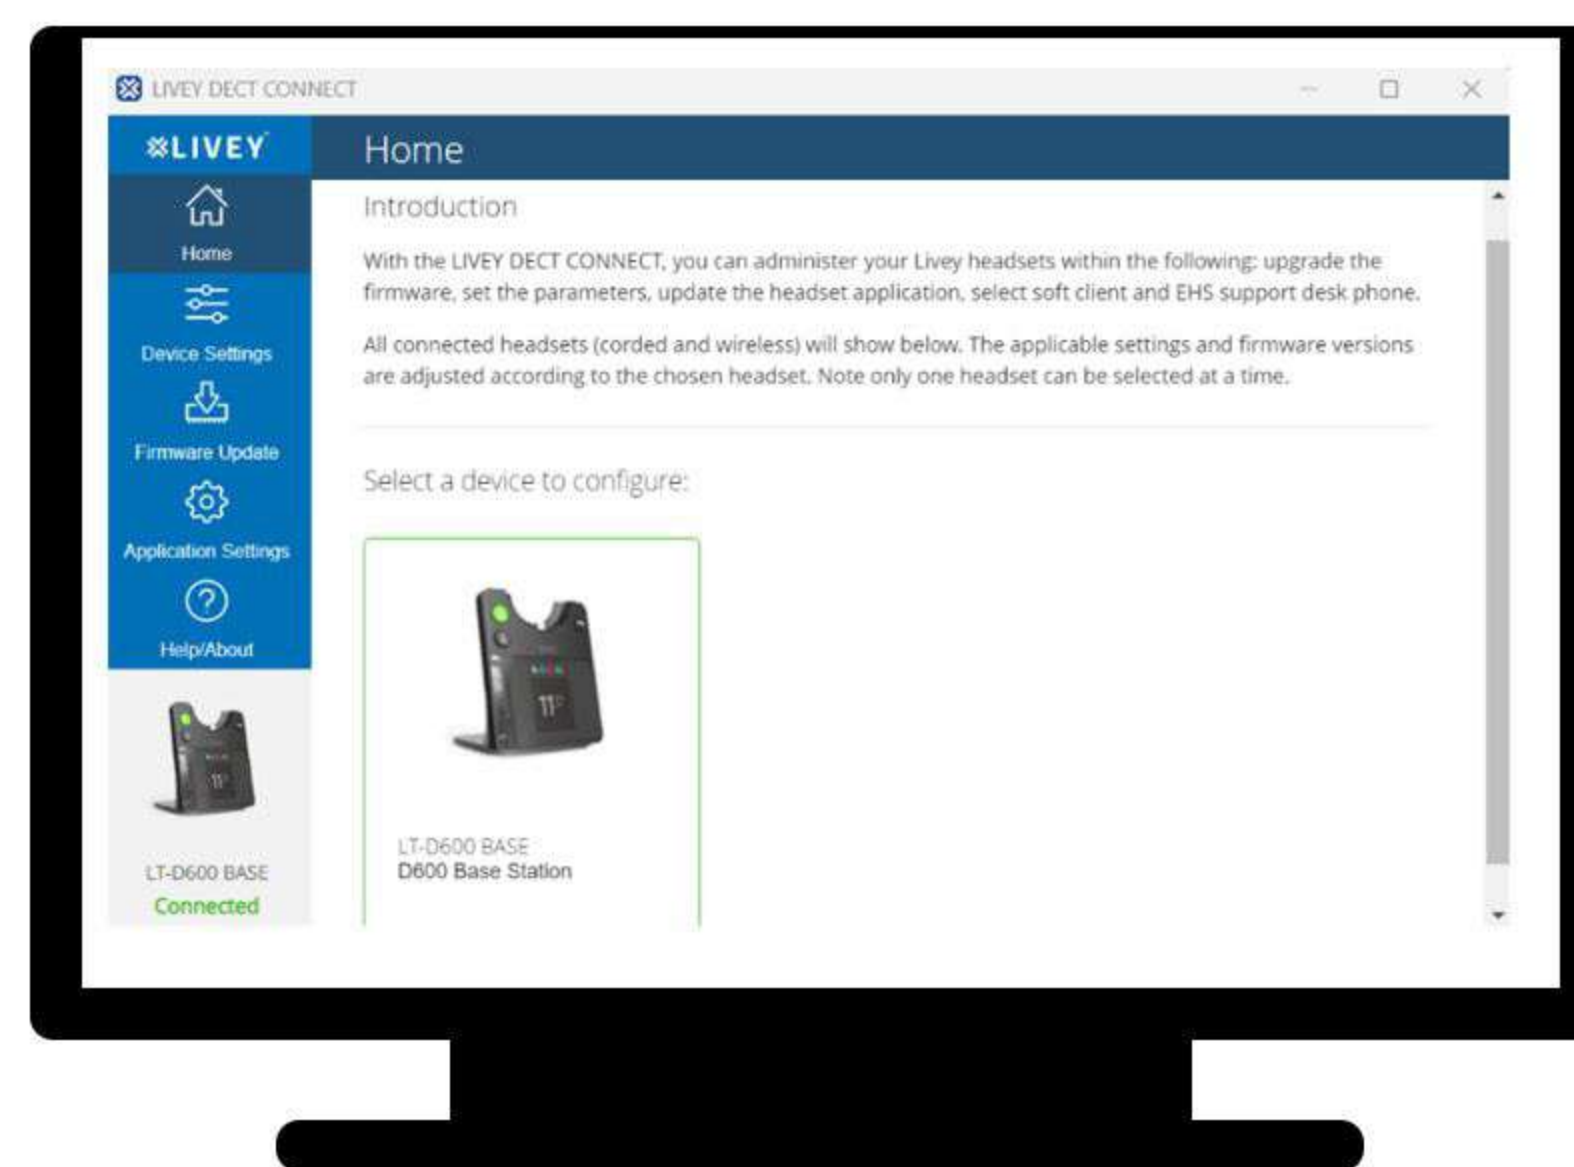


Setup your headset and base

- Remove the cover that has a small battery icon (placed on the ear cup with the boom arm) by turning it counter clockwise.
- Remove the plastic foil that is protecting the battery by gently pulling it out.
- Place the cover back on the battery and turn it clockwise until it clicks back on.
- Move the on/off power slider to turn on the headset (battery is pre-charged 40%).
- Charge the headset using the USB-C cable or the base. It is fully charged when the LED light on the boom arm turns green.




Setup the LIVEY DECT Setup Tool



- Update the firmware by navigating to the 'Firmware updates' section in the PC tool and click 'check for updates'.

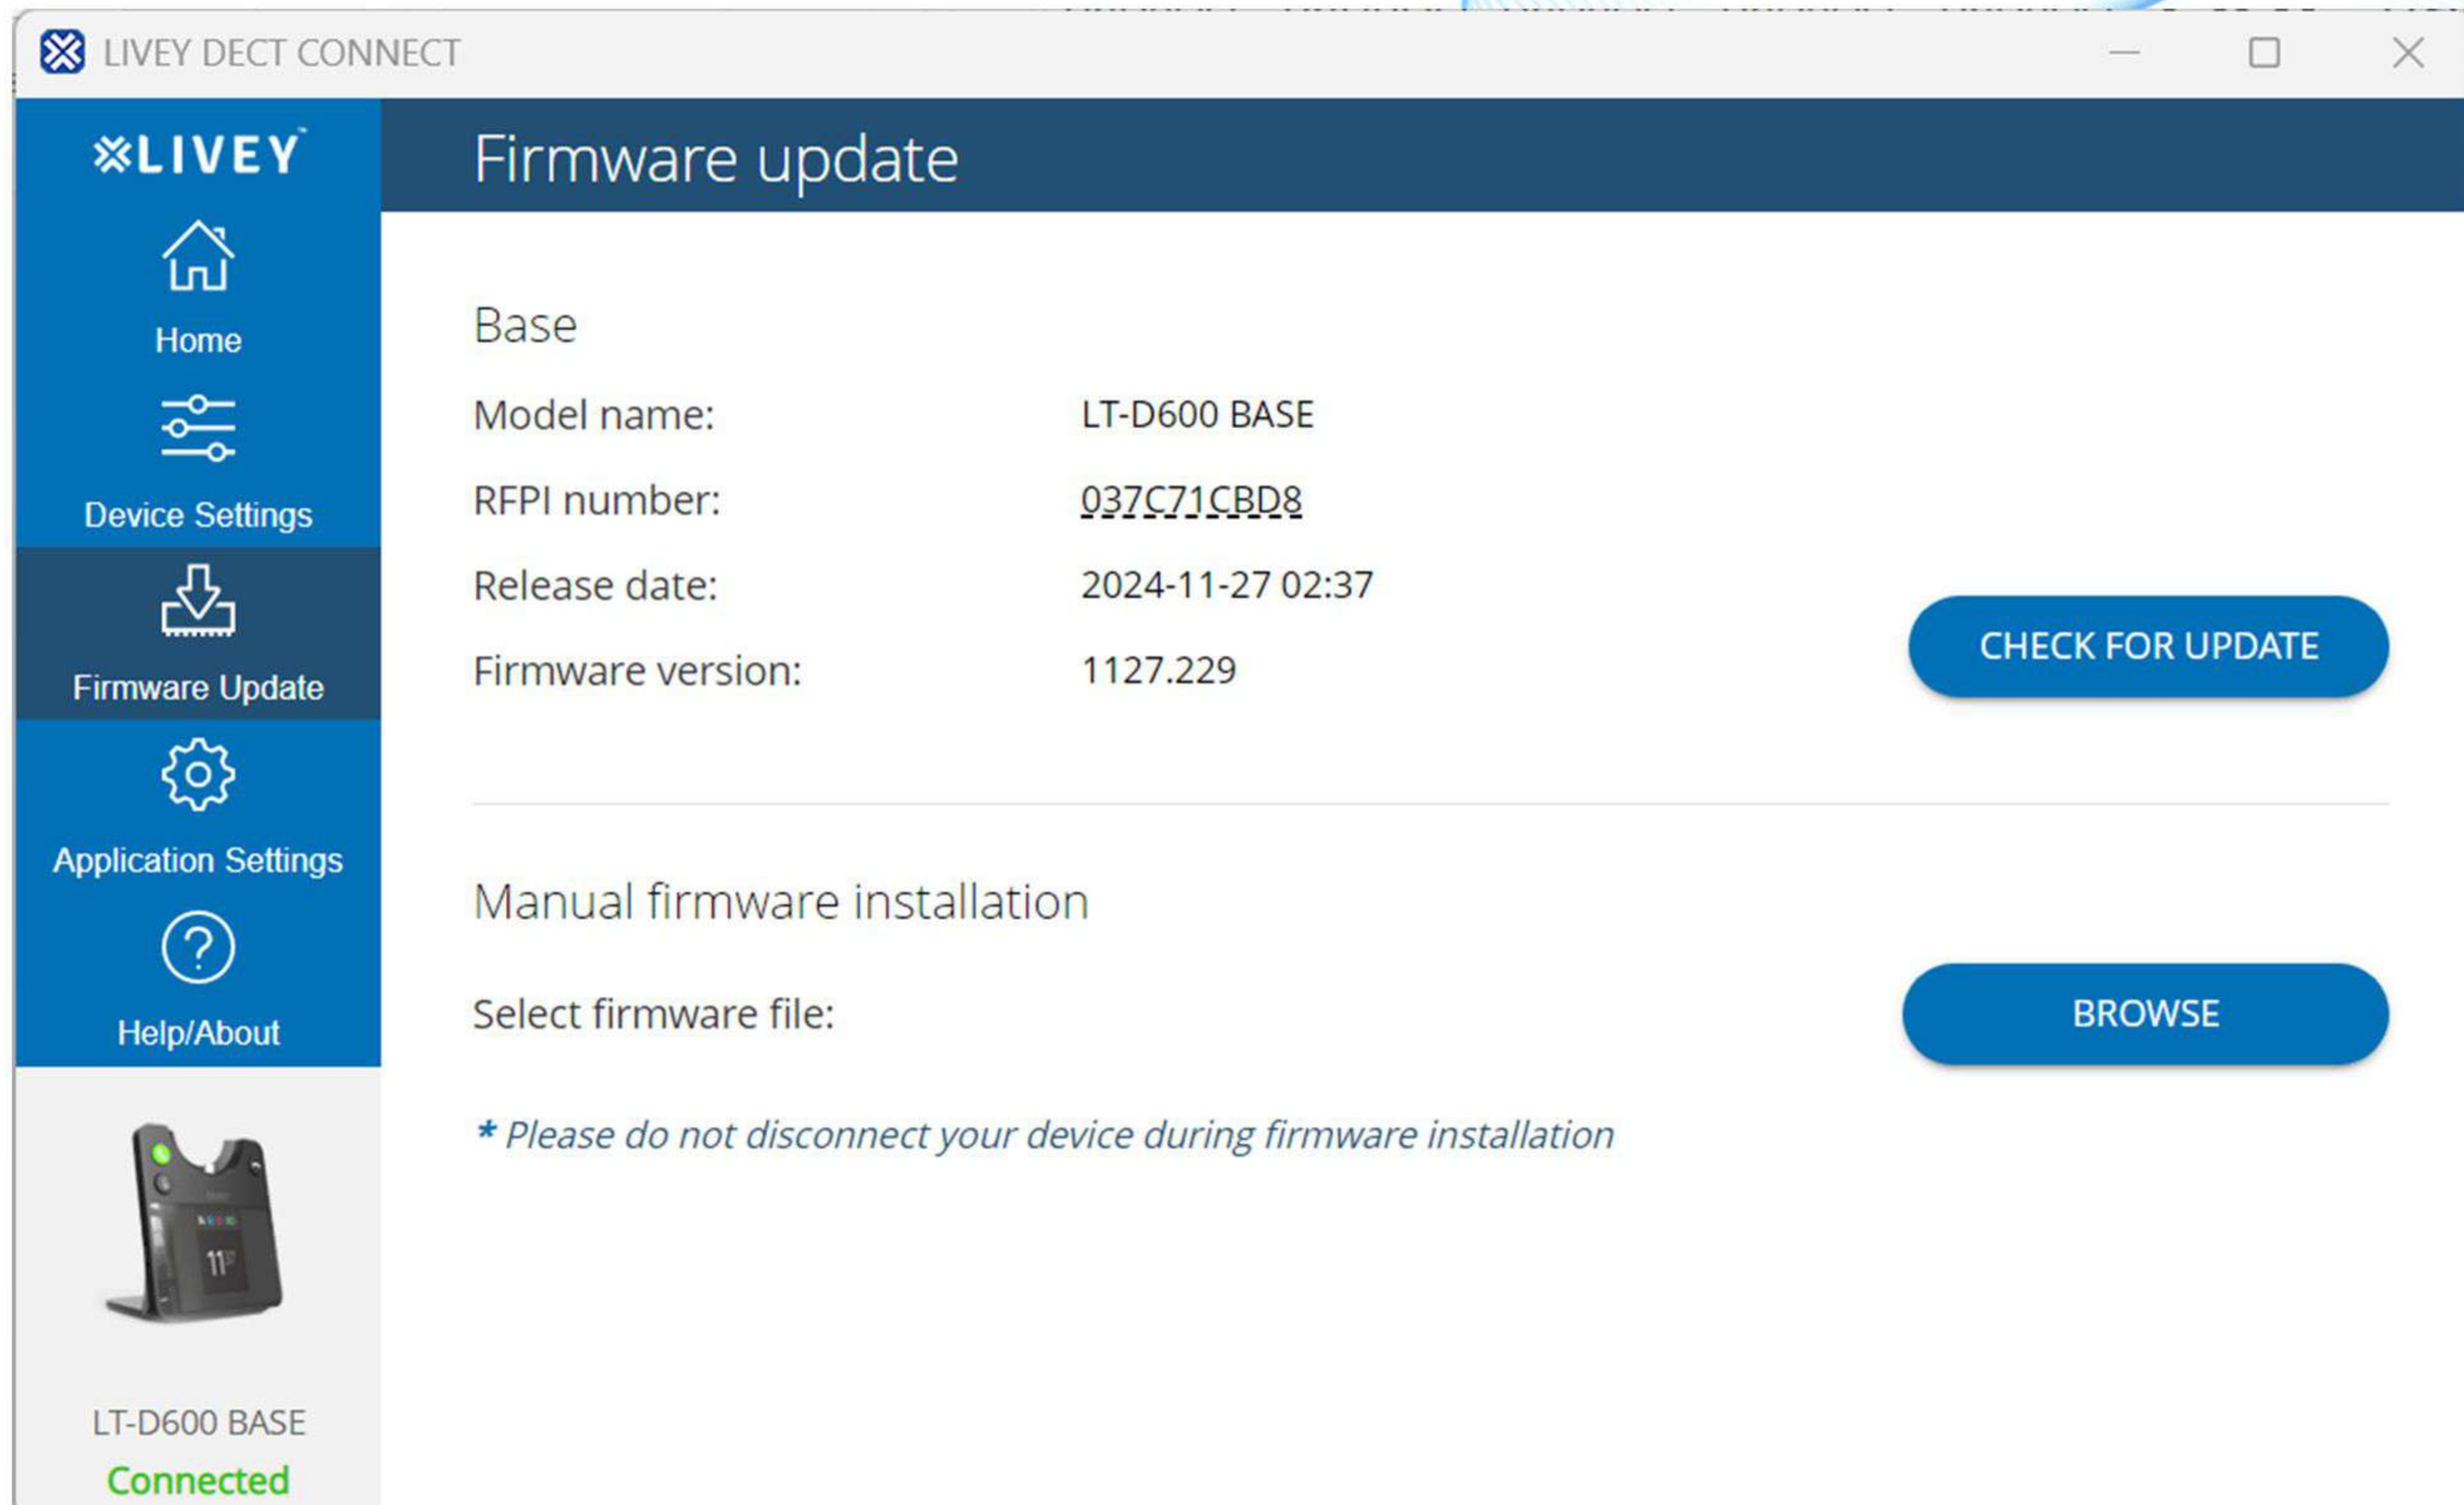

- To manage sound modes, language settings, EHS integration, and other headset configurations go to 'Device settings'.

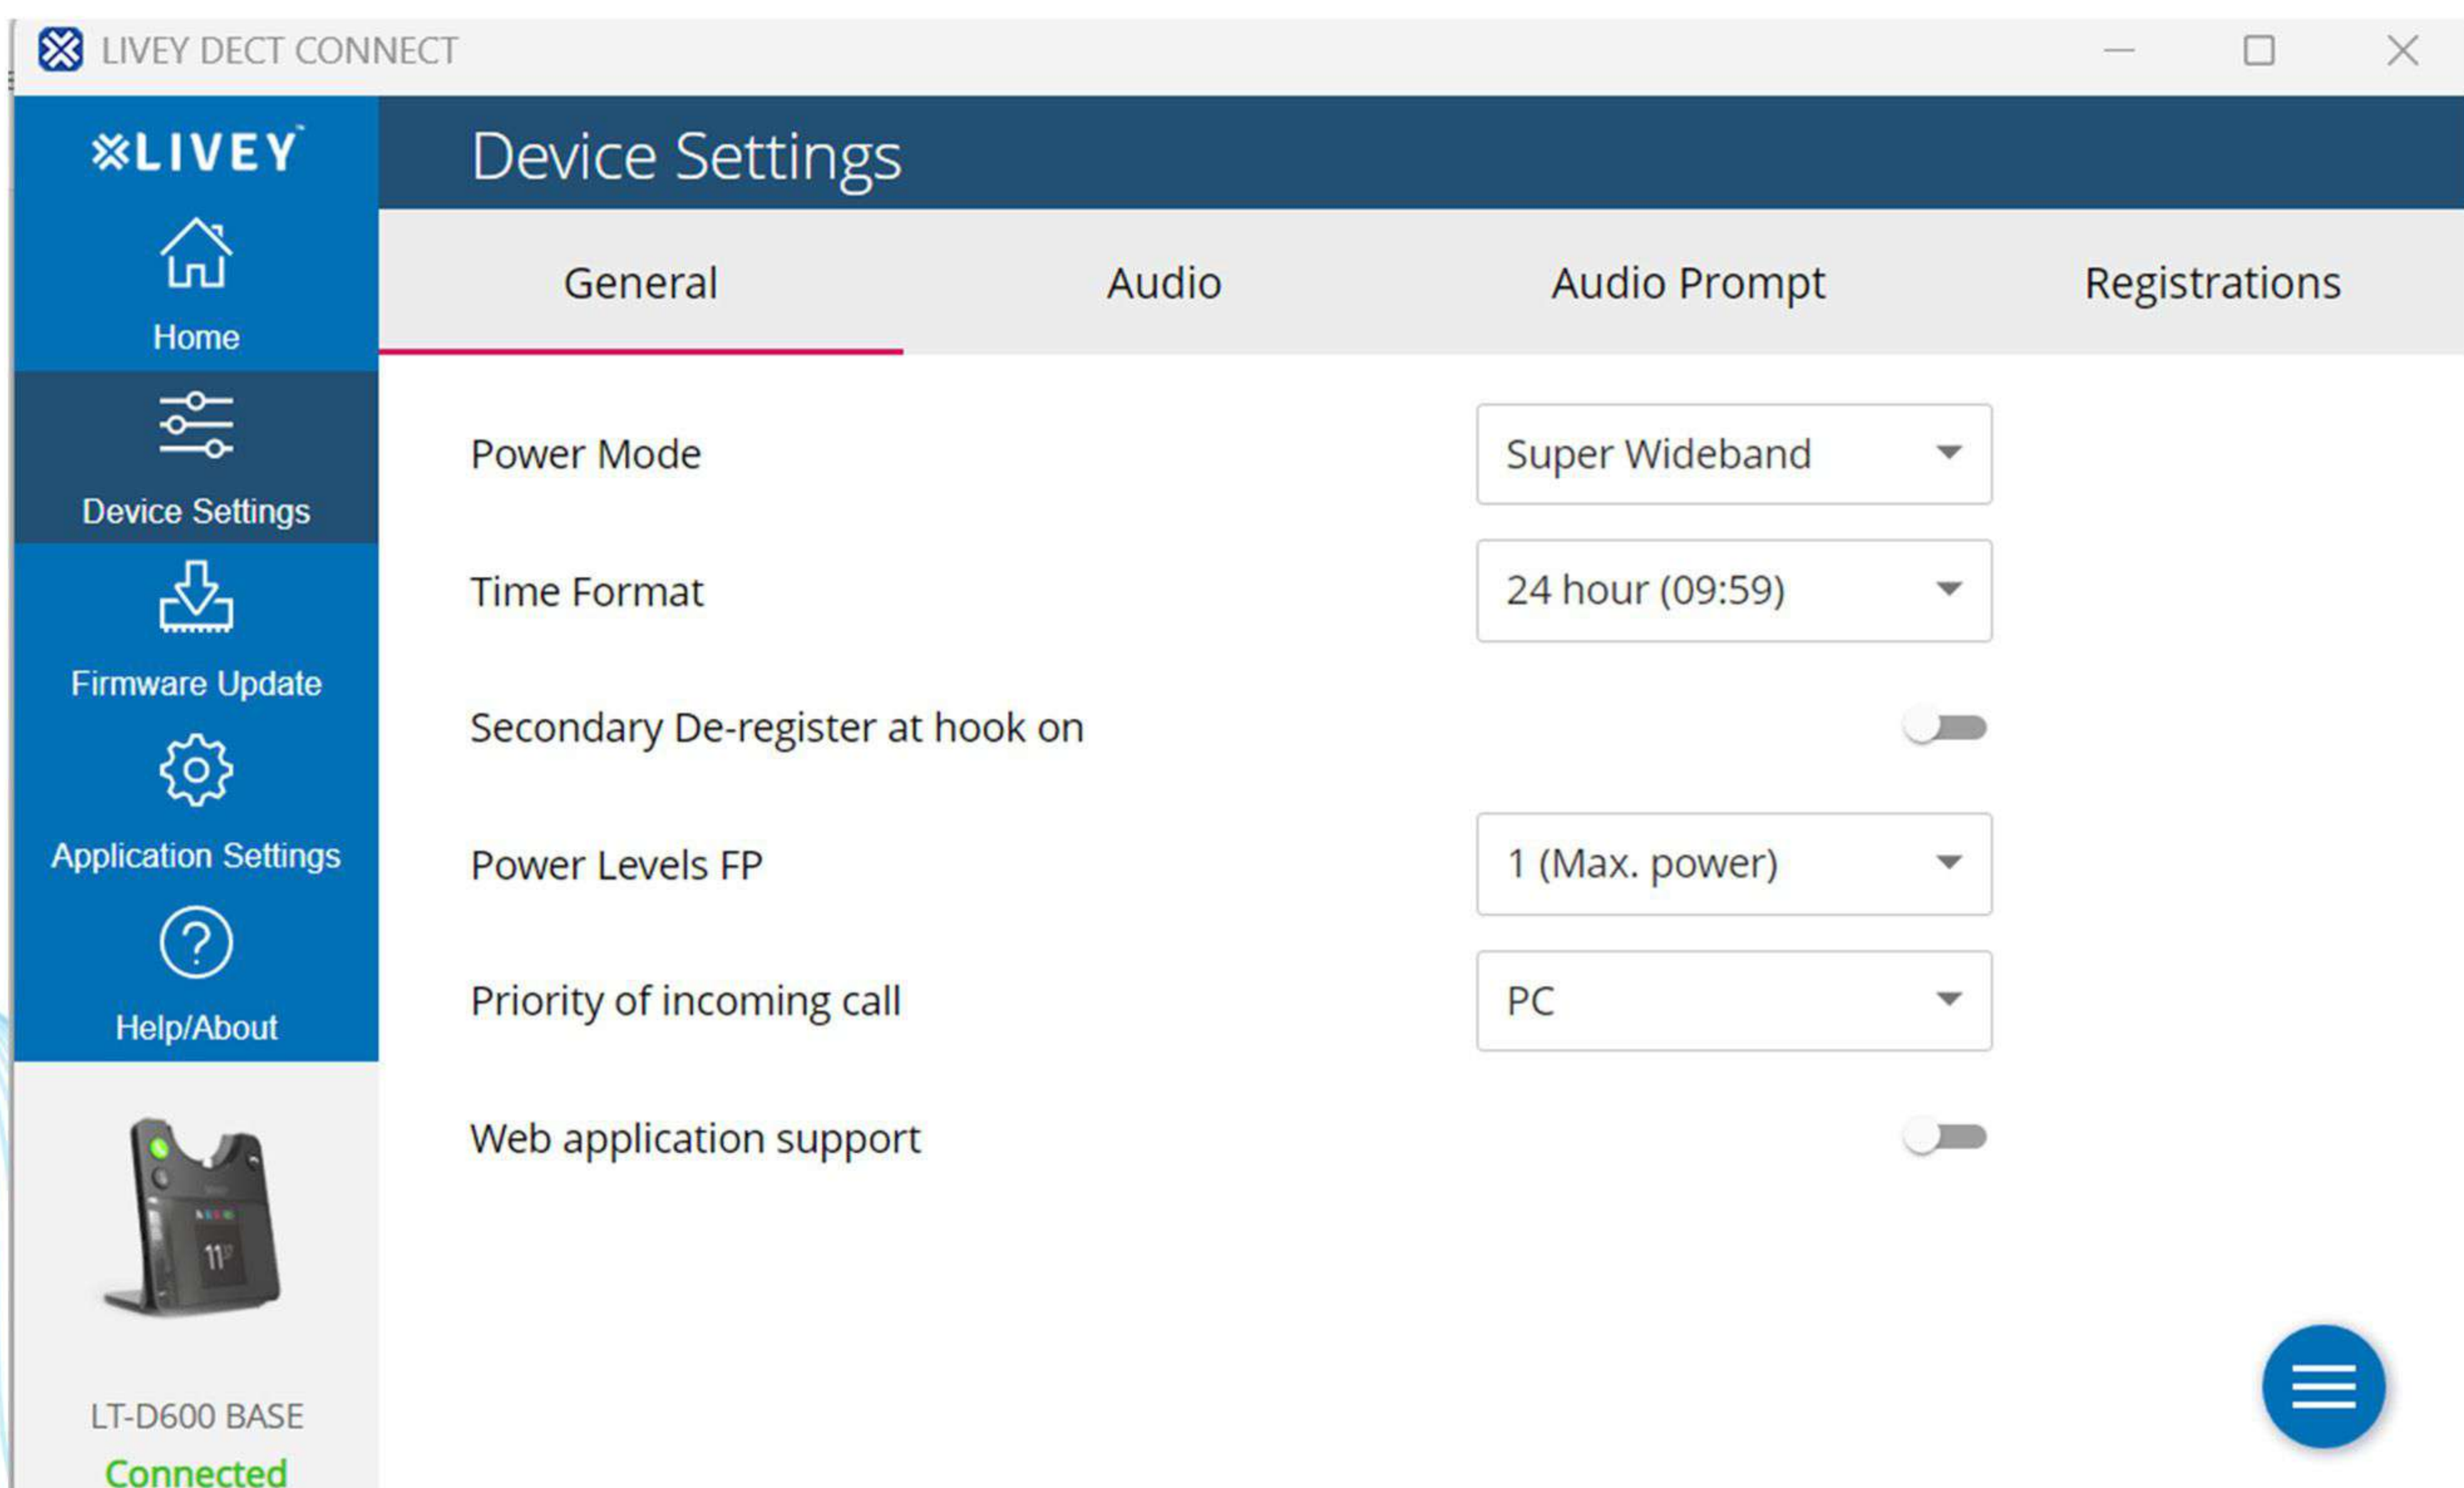

Buttons and features

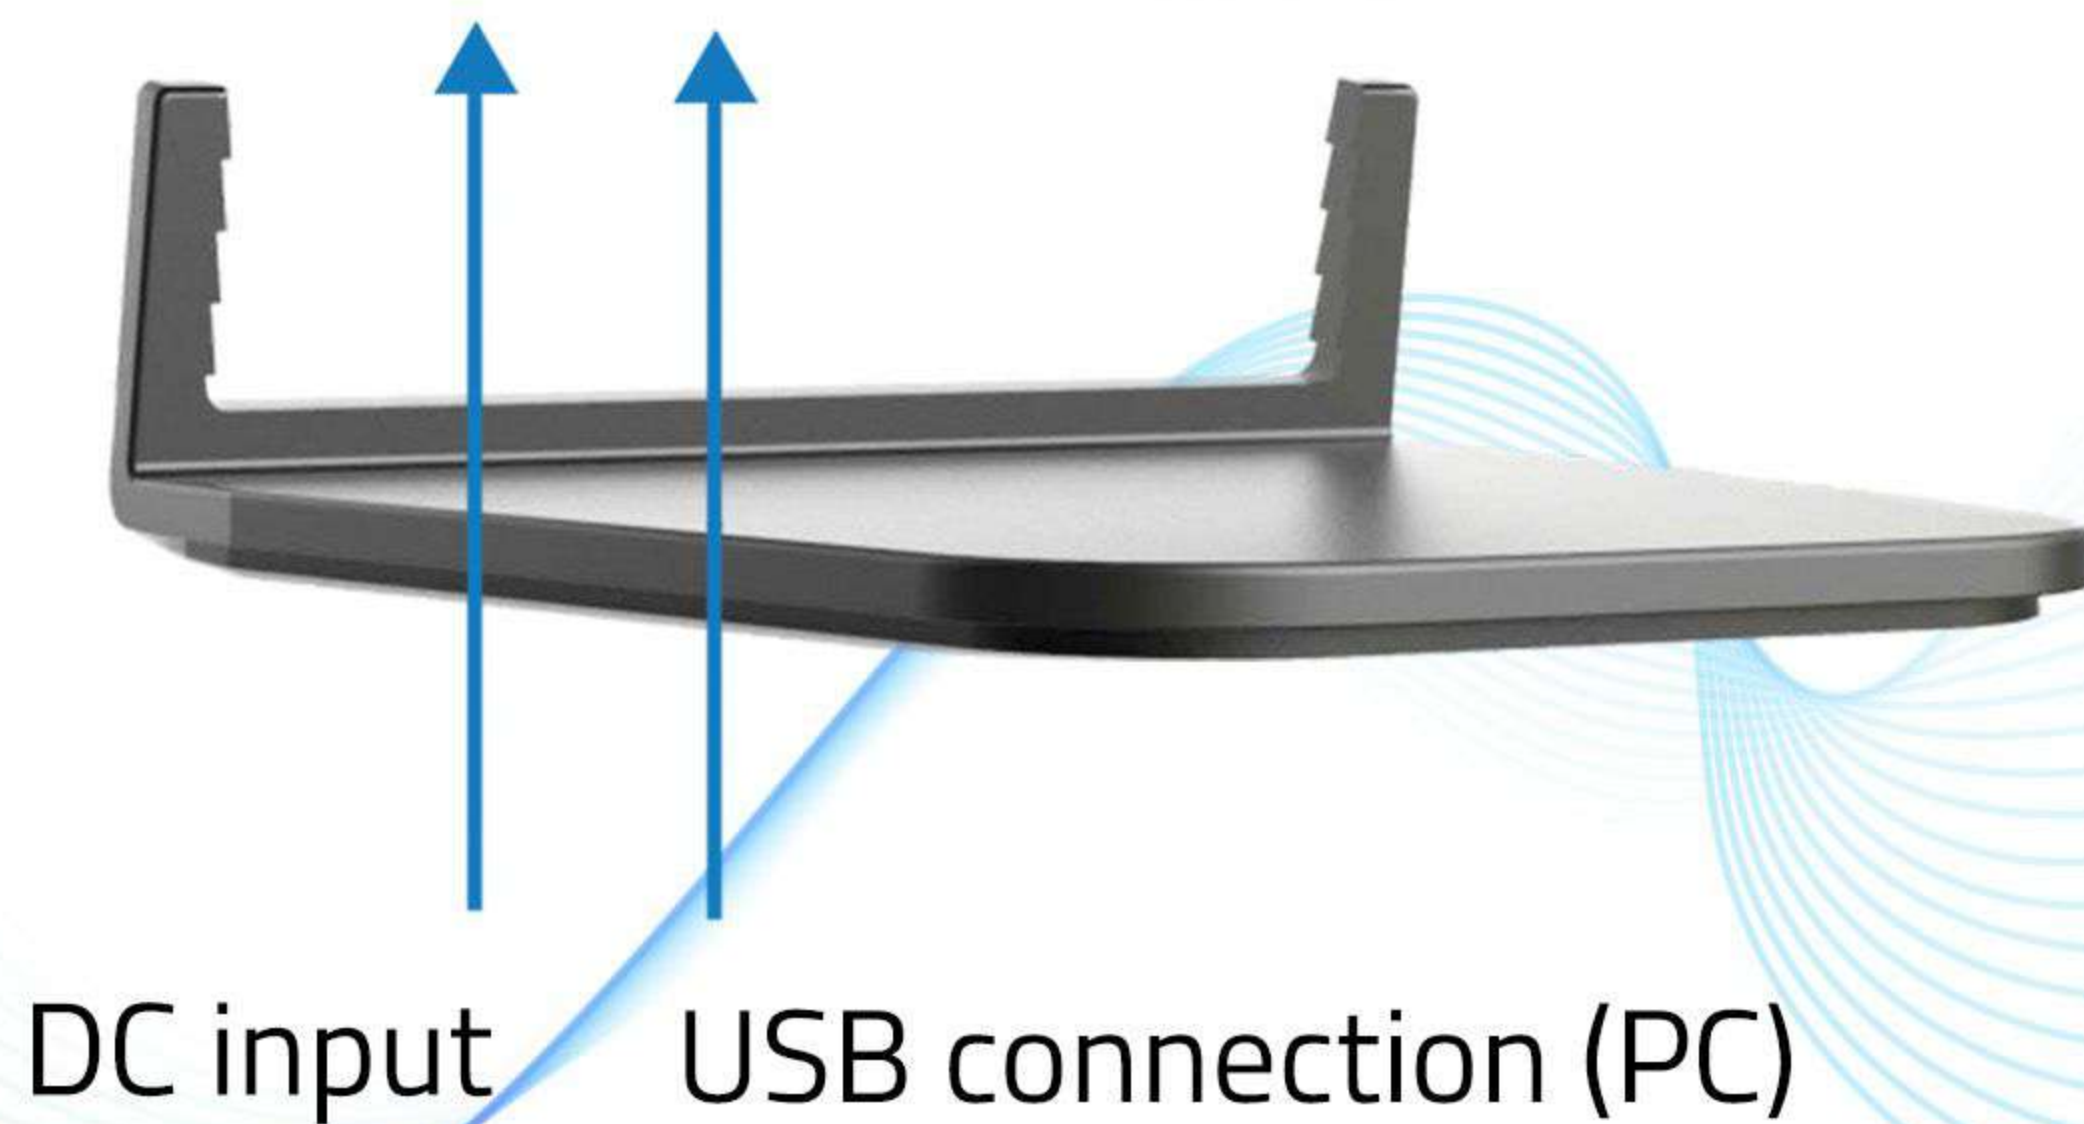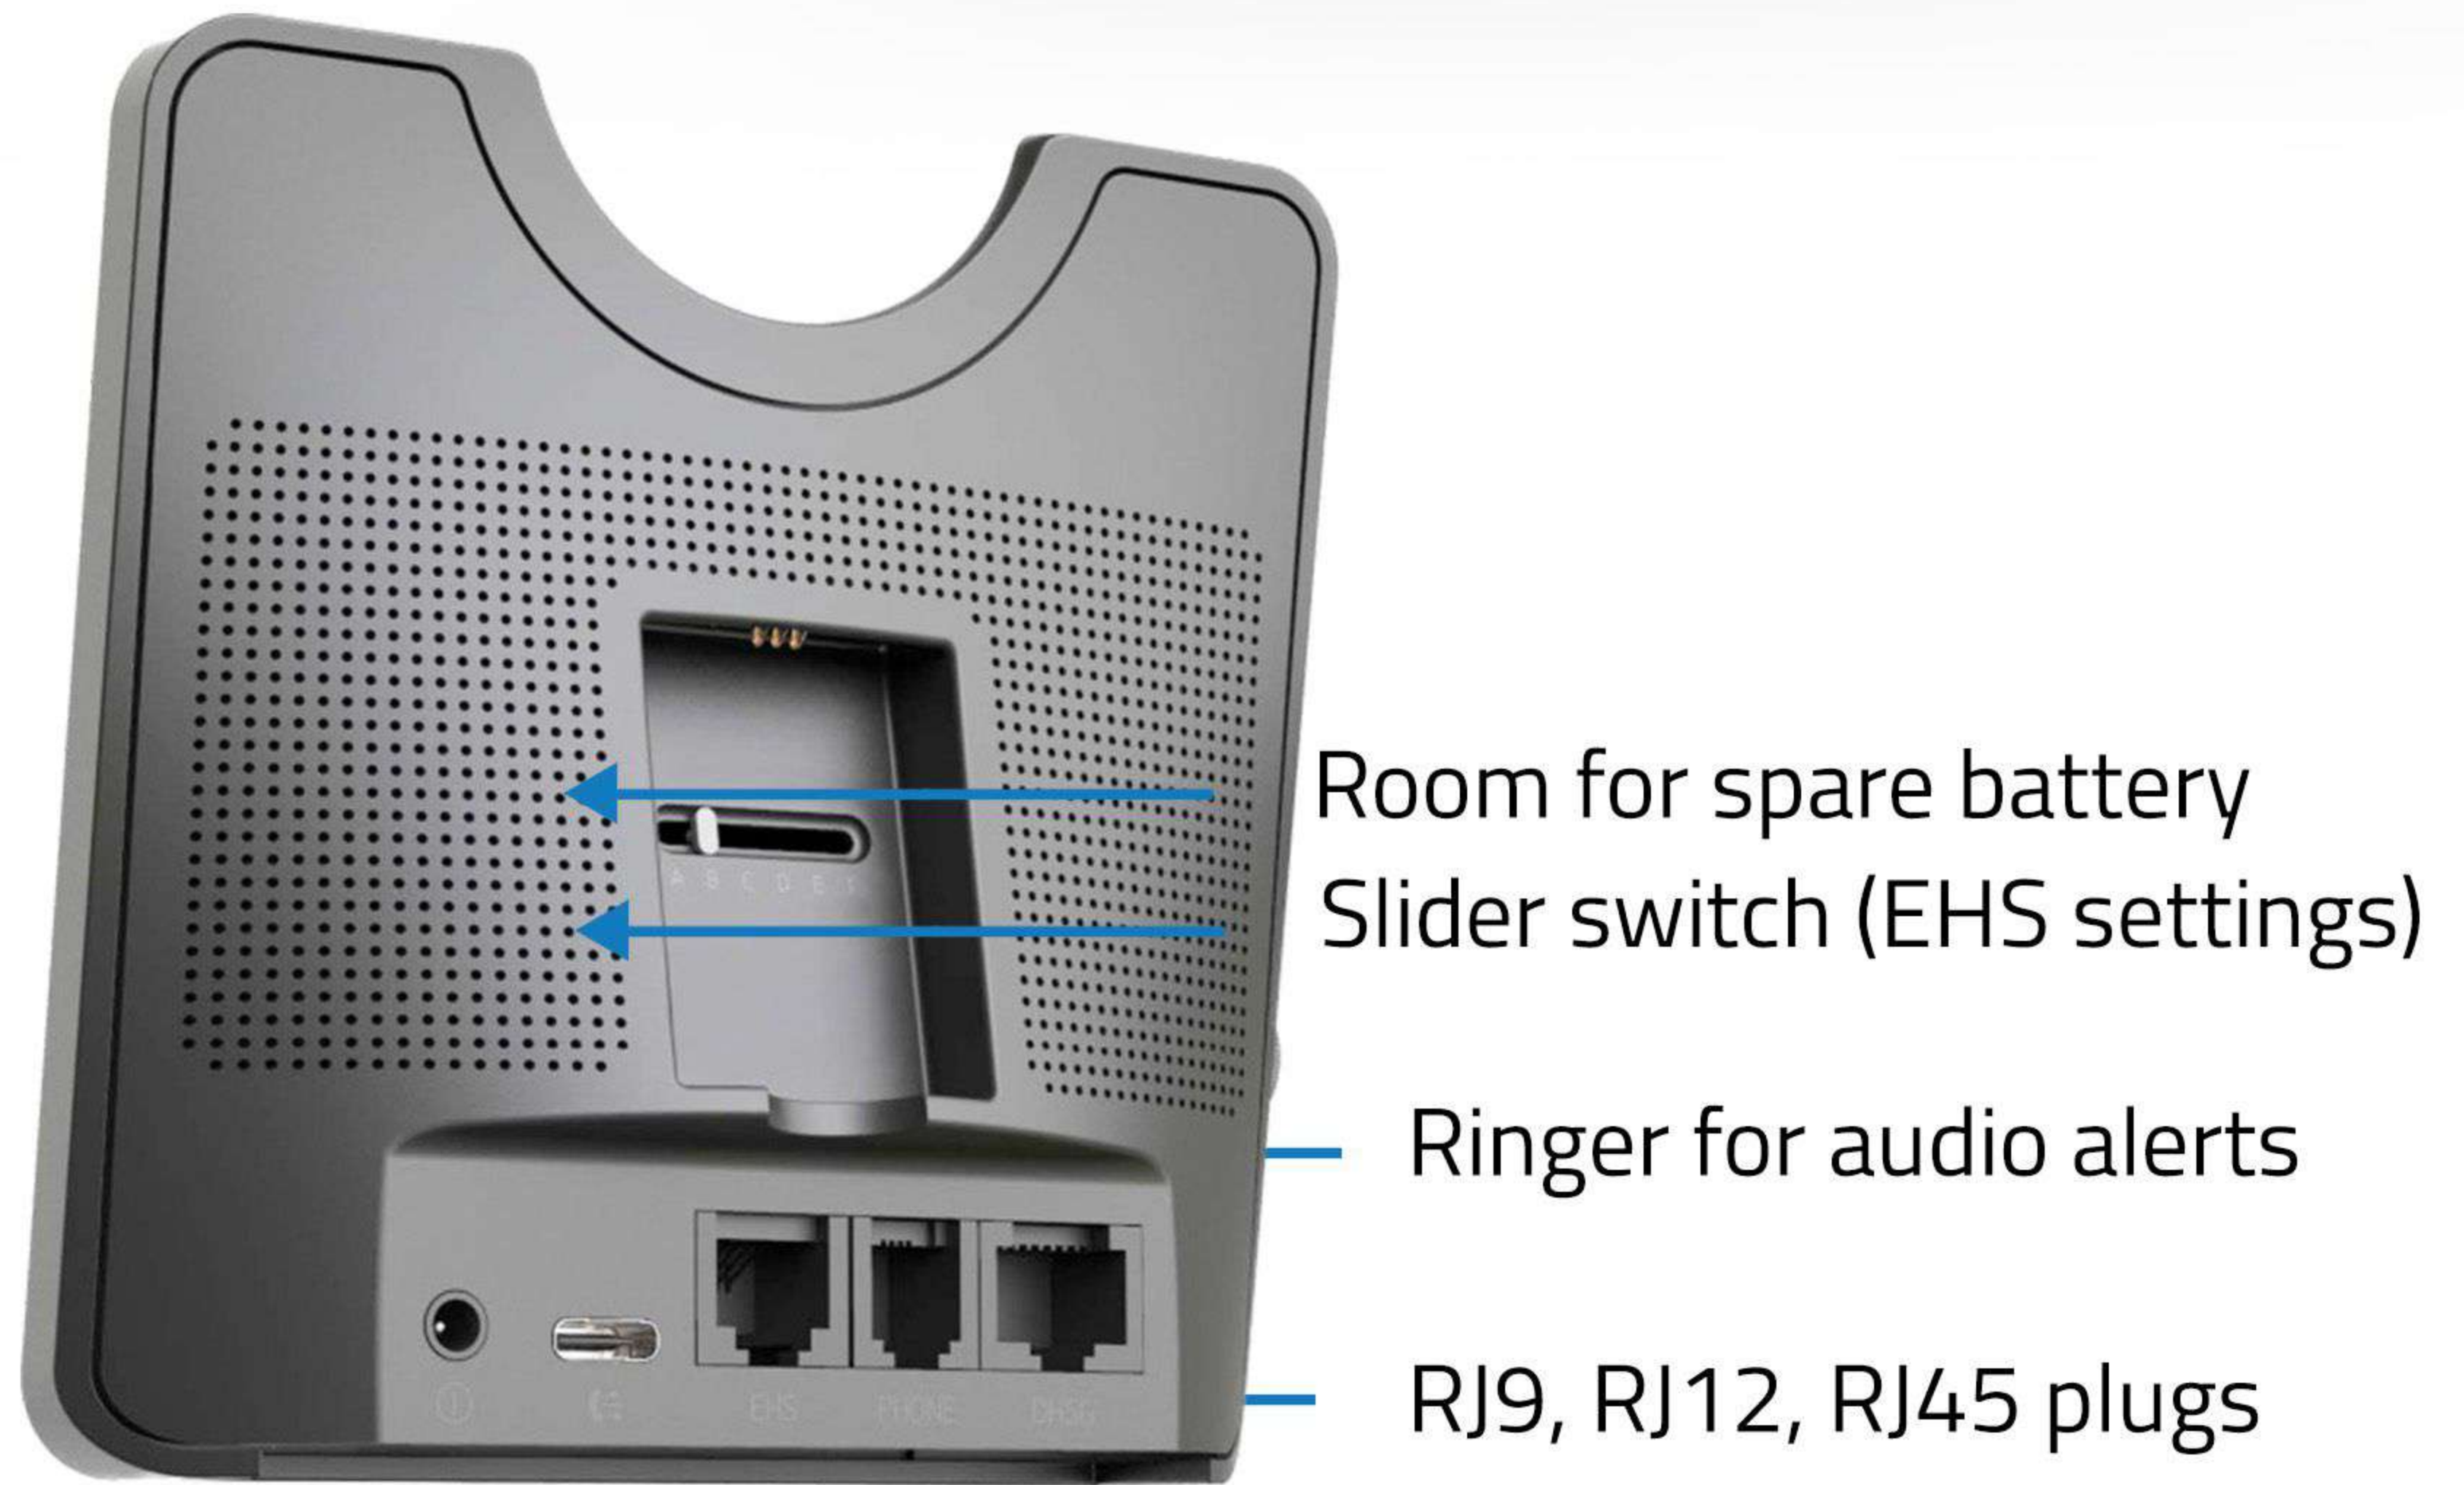



Multi-function button for call control (answer, end, reject, AI voice assistant, busy)

Scroll wheel for volume
Bluetooth® On/Off



ANC



Mute button

Flex area

For optimal use, we recommend having the microphone 2cm from your mouth

USB connection
DECT

LED light



User scenarios

How to connect headset and base

To connect the LT-D600 headset to the LT-D600 base, follow the instructions:

- Connect the base to the power supply and to the PC via DC input.
- Place the headset in the base to register the headset (see photo).
 - ~ If the headset is enabled to connect, it plays the "Headset base connected" voice prompt.
 - ~ If the headset is disabled to connect, it plays the "Headset not subscribed" voice prompt.
- Then check the following:
 - ~ Is the headset turned on?
 - ~ Has the plastic foil been removed from the battery?



How to connect headset and Bluetooth® device

To connect the LT-D600 headset to a Bluetooth® device, follow the instructions:

- To enable or disable Bluetooth®, press the headset Bluetooth® button once (see photo).
- To enable pairing mode, press and hold the headset Bluetooth® button until it plays the "Registering" voice prompt.
- When pairing mode is enabled, the headset will appear on your Bluetooth® device.
- When the headset is discovered on the chosen device, click Connect and it plays the "headset connected" voice prompt.

Note: Your headset can have both a Bluetooth® and a DECT connection available at the same time.





How to connect headset and PC/laptop via dongle

To connect the LT-D600 headset to a PC/laptop via the LIVEY D600 USB dongle, follow the instructions:

- Insert dongle into one of the USB ports on your PC/laptop.
- To enable pairing mode on the dongle, press and hold the DECT dongle button for more than 3 seconds, and blue LED on the dongle will start flashing.
- To enable pairing mode on the headset, press and hold the headset DECT button until it plays the "Registering" voice prompt, and blue/red LED on headset will start flashing, alternately.
- When the headset is connected, it plays the "Headset dongle connected" voice prompt.

Note: To enable or disable DECT, press the headset DECT button once. It is possible to change between the base and the dongle when both are connected. During DECT registration process, make sure the USB-C cable is not connected to the headset.



Changing ear cushions (on-ear/over-ear)

The LT-D600 headset features click-and-change ear cushions for a customizable fit:

- Select your preferred ear cushion:
 - ~ Small on-ear cushion
 - ~ Larger over-ear cushion
- Remove the current cushion by twisting it counter clockwise until it detaches.
- Attach the new cushion by aligning it with the headset hook, then twist clockwise until it clicks into place.

Note: The headset has built-in magnets that automatically detect which ear cushion is in use, adjusting the ANC and sound performance accordingly

